


2. INSTALLATION

Preparation


1. The cooker hood should be placed at a distance of 65-75cm (26-30inch) from the cooking surface for the best effect.
2. Drill a hole in the cupboard, 570*265(mm) for model SPUM60X and 865*265(mm) for model SPUM90X. Make sure the distance between the edge of the hole and the edge of the cupboard edge is at least 35mm.
3. Take off the filter and the two lamps. Remove the two screws on the panel. And then take off the panel.

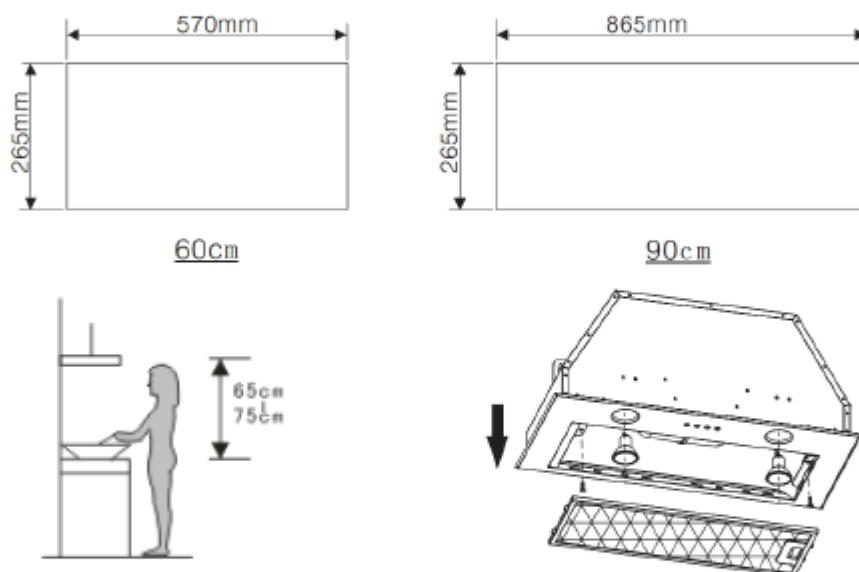


Installation

Method 1


1. Use four ST4*8mm screws to fix the mounting bracket onto the hood. Then put two ST4*30mm screws into the wall. Hang the hood onto the wall.
2. Use ST4*14mm screws to tighten the hood to the cabinet. SPUM60X needs ten screws. SPUM90X needs twelve screws.

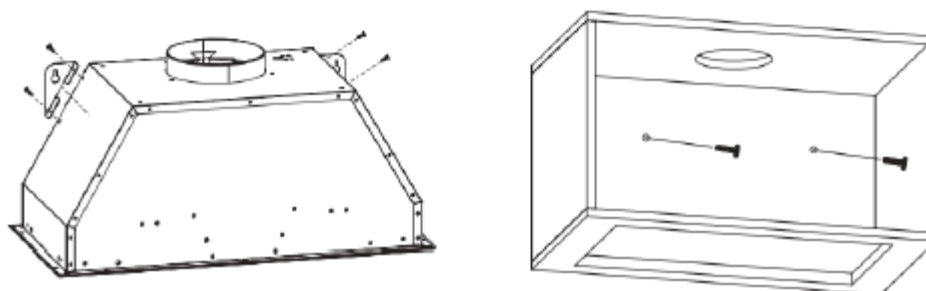

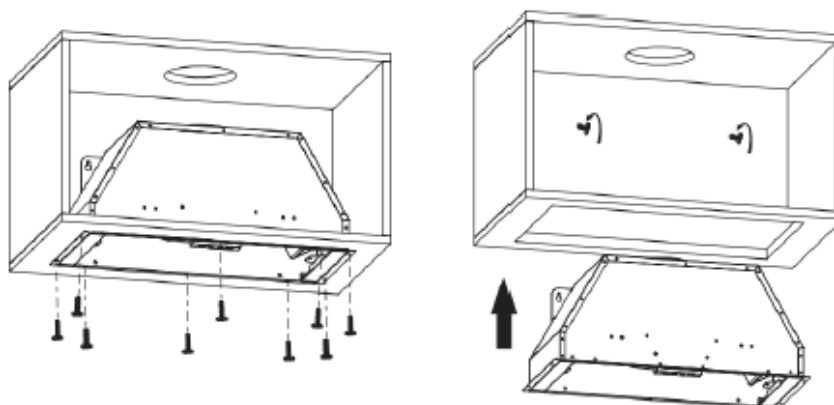


Method 2

1. Use four ST4*8mm screws to fix the mounting bracket onto the hood. Then put two ST4*30mm screws into the wall. Hang the hood onto the wall.
2. Use eight ST4*14mm screws to fix the hood onto the cabinet from the sides.

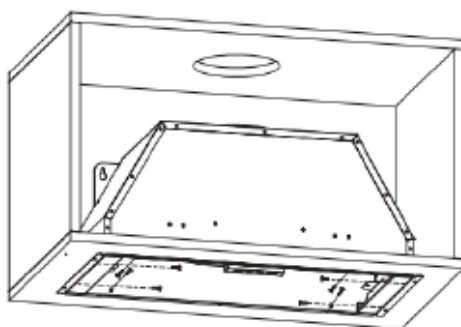

Method 3

1. Use four ST4*8mm screws to fix the mounting bracket onto the hood. Then put two ST4*30mm screws into the wall. Hang the hood onto the wall.
2. Use four M4*35mm screws, eight washers and four nuts to fix the hood onto the cabinet from the top.

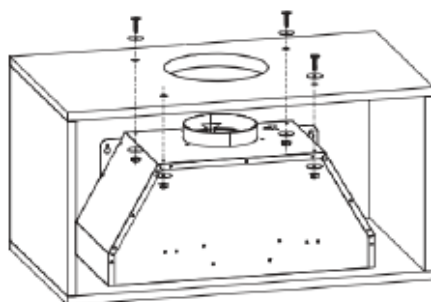

And then connect the ducting pipes to the outlet. Install the lamps and filter back to the hood.